

How to enable SSH service to connect from LAN IP?

I'm using Rpi3 build with rdk-next, When I'm connected to LAN Ip of rdk (ssh root@10.0.0.1) SSH is not working. From WAN Ip (ssh root@192.168.xx.xx) I'm able to SSH login.

Then I try to checking netstat - It shows ssh(dropbear) service is running on specific IP(WAN interface).

So do I need to enable some configuration during build time to enable ssh service on LAN? Or do I need to change system settings to enable it?