

connection ERROR

Hello guys I have tried to do the same setup but I don't know why but I am not able to access the internet in my client the only difference in my setup is I didn't use the switch on the client side since I am using only one client for POC.

If anyone knows the solution please tell me.

I am using RPI 4B for the client I am using and Ubuntu OS

I cloned the latest RDKB repo and build a basic image without any changes.

I think this is the problem so someone know how to configure this

In case you are running in Ethernet mode, add interface of USB-Ethernet adapter in file `/etc/utopia/system_defaults`. Change `lan_ethernet_physical_ifnames`. It will be your lan side.

e.g: `lan_ethernet_physical_ifnames=eth1`