Captive Portal in Emulator

Introduction

Captive portal provides user to configure their Wi-Fi SSID, credentials. On fresh boot-up and factory-reset, Captive Portal prompts to change the default ssid name and password for browsing a any url's on connected client's through Gateway network.

Captive Portal Working steps

Step:1

On Fresh boot-up/Factor-Reset, User's associated with Emulator Gateway Network. Now Connect your Mobile devices to default Wi-Fi SSID and Passkey of Emulator Device.

Emulator Wireless Credentials,

For 2g : SSID : RDKB-EMU-2.4G and Passkey : 2g-password

For 5g : SSID : RDKB-EMU-5G and passkey : 5g-password



Step:2

Next open any web browser on connected client and then try to access any of the http site/WebUI . We observe that http url request gets redirected to default captive portal page as shown as below :

Screen shot : 1

For example : http://home.icequake.net

SII , SII ₂	Ö	(î:	2:12 рм
() ho	ome.icequake.net/captivepc	2]
	χfinity		
	Welcome to XFINITY Internet		
	This step is required to get your devices online Your connection has been activated, but now we need to create your personal WPFH Name and Password		
	Let's Get Set Up		

Type http://10.0.0.1:80 in browser

Ril , Ril 2 🛋		≩∎ 4::	35 рм
10.0.0.1/captive	oortal.php	2	• • •
	χfinity		
	Welcome to XFINITY Internet His step is registed to get per decise ordine "The american halo may accessible ab a new works to only por proceed With Ream and Presented		
	Consciences (b)		

Screen shot : 2

Set your individual Wi-Fi SSID and Passkey for your Emulator device in the captive portal page. Click on Next.

Sıl , Sıl ₂	Ċ.	?	3:49 рм
i home.io	cequake.net/captivepc	2	•
	χfınıty		
Create You This step is requi You'll have t	ur Wi-Fi Name & Pas red, so choose something that you will easily rer o reconnect your devices using the new credent	SSWOT(nember. ials.	d
	2.4 GHz Network		
Wi-Fi Name	Test-emu-2g	\bigcirc	
Wi-Fi Password	Passwords Hide		
	Your password is currently: Weak		
	5 GHz Network		
Wi-Fi Name	Test-emu-5g		
Wi-Fi Password	Passwords Hide	\bigcirc	
	Your password is currently: Weak		
	Settings ame settings for 2.4GHz and 5GHz Wi-Fi networ Next		

Screen shot : 3

Click on Next . The New SSID and Passkey is set and then comes out from Captive Portal page.





Enabling and Disabling the captive portal page on fresh boot-up / factory-reset

```
root@qemux86broadband:~# dmcli simu getv Device.DeviceInfo.X_RDKCENTRAL-COM_CaptivePortalEnable
CR component name is: com.cisco.spvtg.ccsp.CR
subsystem_prefix .
getv from/to component(com.cisco.spvtg.ccsp.pam): Device.DeviceInfo.X_RDKCENTRAL-COM_CaptivePortalEnable
Execution succeed.
Parameter 1 name: Device.DeviceInfo.X_RDKCENTRAL-COM_CaptivePortalEnable
type: bool, value: false
root@qemux86broadband:~# dmcli simu setv Device.DeviceInfo.X_RDKCENTRAL-COM_CaptivePortalEnable bool false
CR component name is: com.cisco.spvtg.ccsp.CR
subsystem_prefix .
setv from/to component(com.cisco.spvtg.ccsp.pam): Device.DeviceInfo.X_RDKCENTRAL-COM_CaptivePortalEnable
Execution succeed.
```

If this Parameter "Device.DeviceInfo.X_RDKCENTRAL-COM_CaptivePortalEnable" gets disabled, WebUI should be UP instead of captiveportal.

If this parameter "Device.DeviceInfo.X_RDKCENTRAL-COM_CaptivePortalEnable" gets enabled, Captive Portal should be UP instead of WebUI.



Login to the device WebUI from your PC. Please follow the below steps,

URL : http://10.0.0.1(GatewayIP):80

Default login ID and Password : admin and password

🗅 Login - Xfinity 🛛 🗙 📃			keerthana
← → C ㎡ 🗎 192.168.2.115:8080			☆ » =
xfinity.	() 0%	6 🔿 Internet 🔿 Wi-Fi 😮 MoCA 😮 Low Security	
Username: admin Password:	Gateway > Login		
LOGIN	LOGIN Please login to view your WIFI passkey or to view and edit detailed network settings.		
	WiFi Configuration		
	WiFi SSID (2.4Ghz): Test-emu-2g WiFi Passkey (2.4Ghz): Log in to view pa	sskey	
	WIEL CSID (SCho)- Test any Sc		
	WiFI Passkey (5Ghz): Log in to view pa	sskey	
	Home Network	Connected Devices	
	C Ethernet	keerthana-OptiPlex-9020	
	🔿 WI-FI	testing-HP-Compaq-8000-Elite-CMT-PC	
	MoCA		
	Line Low Low		
	Xfinity.com • customerCentral • Use	er Guide	

If it's first time login , you are prompted to change your default password. Please login again using the New Password.



🗅 Troubleshootir	cing > Cl × 🔼	keerthana
← → C fi 🗎	192.168.2.115:8080/admin_password_change.php	¶☆ » ≡
	Xfinity 10% Internet Wi-Fi OMOCA Low Security	
	Change Password	
	Periodically change your Admin Tool password to protect your network.	
	Password	
	Current Password: password	
	New Password: mypassword	
	Re-enter New Password: mypassword	
	Show Typed Password:	
	Password Must be minimum 8 characters(Alphanumeric only). No spaces. Case sensitive.	
	SAVE CANCEL	
	Xfinity.com • customerCentral • User Guide	

Bring the device to Factory Reset Mode :

• Go to Troubleshooting drop-down menu and select the Reset/Restore Gateway.

Click on Restore Factory Settings option, a confirmation window opens and then click 'OK'.

Troubleshooting > R ×			keerthana
← → C 🕯 🗋 192.168.2.115:8080/resto	pre_reboot.php		∽ × ≡
xfinity.		Hi admin • <u>Logout</u> • <u>Change Pass</u> ☐ 0%	word urity
► Gateway	Gateway Troubleshooting > Reset / Restore Gateway		
Connected Devices Parental Control	Reset or restore the Gateway.	more	ž
 Advanced Troubleshooting 	Reset / Restore Gateway		
Logs	RESET	Press "Reset" button to restart the gateway.	
Diagnostic Tools	RESET WI-FI MODULE	Press "Reset WI-FI Module" to restart just the WI-FI Module only.	
Reset/Restore Gateway	RESET WI-FI ROUTER	Press "Reset Wi-Fi Router" to restart Wi-Fi and Router modules.	
Change Password	RESTORE WI-FI SETTINGS	Press "Restore Wi-Fi Settings" to activate your Gateway Default Settings for Wi-Fi only. Only your Wi-Fi settings will be lost.	
	RESTORE FACTORY SETTINGS	Press "Restore Factory Settings" to activate your Gateway Default Settings. All your previous settings will be lost.	
	Xfinity.com • customerCentral • User Guide		
192.168.2.115:8080/restore_reboot.php#			