

# RDKC : RDKC Media server(RMS) with Pipewire

- [Introduction](#)
- [Build and Flash Procedure](#)
- [Validation Procedure of RMS with RTSP streaming](#)

## Introduction

The RDKC Media Server is much more than a multi-format, multi-protocol server that delivers your media rich content across multiple screens and platforms. The RDK camera software runs on RPi-0/RPI-3 device. With this RTSP streaming we can able to play live streaming content in VLC player. This page dedicated to bringing up and validation of RMS functionality with RTSP streaming in RPI-0/RPI-3.

## Build and Flash Procedure

Refer below link to build camera image

Morty:

[RDK-C Build Instruction for RPI-0](#)

[RDK-C Build Instruction for RPI-3](#)

Dunfell:

[RDK-C rdk-next Yocto 3.1 dunfell build for Raspberrypi](#)

## Validation Procedure of RMS with RTSP streaming

### **STEP 1:**

Add require SSID and PSK in /etc/wpa\_supplicant.conf file in below format

```
network={  
ssid="username"  
psk="password"  
}
```

#### **Console output**

```
ctrl_interface=/var/run/wpa_supplicant  
ctrl_interface_group=0  
update_config=1  
  
network={  
ssid="XXXX"  
psk="YYYYYYYYY"  
}
```

### **STEP 2:**

Reboot the Target

After Reboot don't do step 1 and 2.

Note : Step 1 & 2 is only applicable for fresh target boot-up with new image.

### **STEP 3:**

WiFi connection is must needed for RMS validation.

Check WiFi connection by using below command.

## ifconfig

### Console output

```
root@raspberrypi3-rdk-camera:~# ifconfig
eth0      Link encap:Ethernet  HWaddr B8:27:EB:87:67:91
          UP BROADCAST MULTICAST  MTU:1500  Metric:1
          RX packets:0 errors:0 dropped:0 overruns:0 frame:0
          TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:0 (0.0 B)  TX bytes:0 (0.0 B)

lo        Link encap:Local Loopback
          inet addr:127.0.0.1  Mask:255.0.0.0
          UP LOOPBACK RUNNING  MTU:65536  Metric:1
          RX packets:89842 errors:0 dropped:0 overruns:0 frame:0
          TX packets:89842 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:25639748 (24.4 MiB)  TX bytes:25639748 (24.4 MiB)

wlan0     Link encap:Ethernet  HWaddr B8:27:EB:D2:32:C4
          inet addr:192.168.43.146  Bcast:192.168.43.255  Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:44 errors:0 dropped:0 overruns:0 frame:0
          TX packets:103 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:4484 (4.3 KiB)  TX bytes:10216 (9.9 KiB)
```

## STEP 4:

check loaded module by using below command

### lsmod

### Console output

```
root@raspberrypi3-rdk-camera:~# lsmod
Module                  Size  Used by
bcm2835_v4l2            40563  0
v4l2_common             4809  1 bcm2835_v4l2
videobuf2_vmalloc       6264  1 bcm2835_v4l2
videobuf2_memops        1528  1 videobuf2_vmalloc
videobuf2_v4l2         12640  1 bcm2835_v4l2
videobuf2_core          27389  2 bcm2835_v4l2,videobuf2_v4l2
videodev               154457  4 v4l2_common,videobuf2_core,bcm2835_v4l2,videobuf2_v4l2
media                   23307  1 videodev
brcmfmac               258239  0
brcmutil               7590  1 brcmfmac
snd_bcm2835            21405  0
cfg80211              492836  1 brcmfmac
snd_pcm                79872  1 snd_bcm2835
rfkill                 19936  3 cfg80211
snd_timer              20294  1 snd_pcm
snd                    52949  3 snd_timer,snd_bcm2835,snd_pcm
lirc_rpi                6840  0
lirc_dev               7533  1 lirc_rpi
uio_pdrv_genirq         3469  0
uio                     8703  1 uio_pdrv_genirq
fixed                  2876  0
sch_fq_codel           9662  2
ipv6                   384101  18
```

#### **STEP 5:**

check camera device there or not by using below command

ls /dev/video0

##### **Console output**

```
root@raspberrypi0-rdk-camera:~# ls /dev/video0
/dev/video0
```

#### **STEP 6:**

Before validate this use case we should stop rms binary and mediastreamer binary with below command.

systemctl stop rms-launcher

systemctl stop mst-launcher

#### **STEP 7:**

Run the pipewire binary with below command

pipewire &

##### **Console output**

```
root@raspberrypi3-rdk-camera:~# pipewire &
```

#### **STEP 8:**

Run the pipewire media session binary with below command

pipewire-media-session &

##### **Console output**

```
root@raspberrypi3-rdk-camera:~# pipewire-media-session &
```

#### **STEP 9:**

Run the RMS binary with below command

cd /usr/local/rms/bin/

./rdkmediaserver ../config/config.lua &

##### **Console output**

```
root@raspberrypi3-rdk-camera:~# cd /usr/local/rms/bin/
root@raspberrypi3-rdk-camera:/usr/local/rms/bin# ./rdkmediaserver ../config/config.lua &
[3] 21317
root@raspberrypi3-rdk-camera:/usr/local/rms/bin#
Successfully retrieved the MAC as b8:27:eb:87:67:91
got video format: H264
  size: 1280x720
  framerate: 25/1
```

#### **STEP 10:**

Enter into the Telnet console with telnet command

telnet localhost 1222

##### **Console output**

```
root@raspberrypi3-rdk-camera:~# telnet localhost 1222
Trying ::1...
Trying 127.0.0.1...
Connected to localhost.
Escape character is '^'.
```

After entering the telnet console need to stop webrtc streaming, so we should check webrtc status with "listconfig" command.

##### **Console output**

```
listconfig
Command entered successfully!
Run-time configuration

  dash: []
  hds: []
  hls: []
  metalistener: []
  mss: []
  process: []
  pull:
    --
    configId: 1
    localStreamName: stream2
    status:
      current:
        description: Streaming
        uniqueStreamId: 1
    uri: sercom://0
  push: []
  record: []
  webrtc:
    --
    configId: 2
    roomId: rpi0
    rrsip: 18.224.54.11
    rrsport: 81
```

#### **STEP 11:**

At that same telnet console, need to give the below command for RTSP streaming

pushStream uri=rtsp://camera\_ip:5544 localStreamName=stream2

Example:

pushStream uri=rtsp://192.168.43.146:5544 localStreamName=stream2

### Console output

```
pushStream uri=rtsp://192.168.43.146:5544 localStreamName=stream2
Command entered successfully!
Local stream stream2 enqueued for pushing to rtsp://192.168.43.146:5544 as stream2

configId: 4
forceTcp: false
keepAlive: true
localStreamName: stream2
targetStreamName: stream2
targetStreamType: live
targetUri:
  fullUri: rtsp://192.168.43.146:5544
  port: 5544
  scheme: rtsp
```


### STEP 12:

On VLC player, for RTSP streaming

need to enter media Open Network Stream option and then give rtsp URL to play streaming content in VLC

[rtsp://camera\\_ip:5544/stream2](rtsp://camera_ip:5544/stream2)

Example :<rtsp://192.168.43.146:5544/stream2>

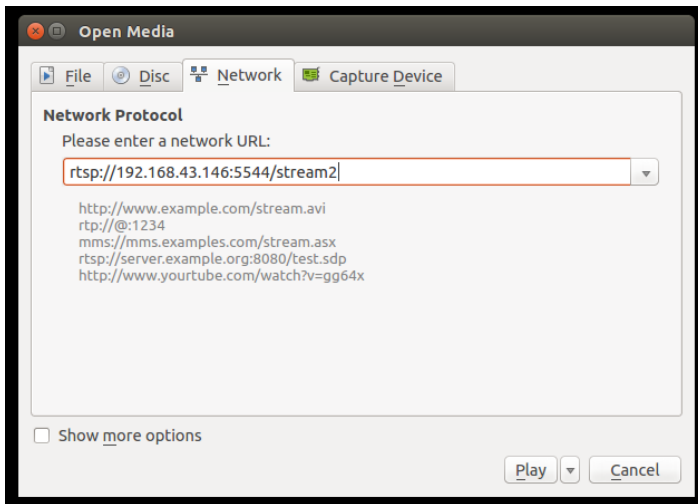

We can able to see the live streaming content on VLC Player.

Note: VLC player available PC and RPI target should run in same network.